


BoXo

Version 1.0

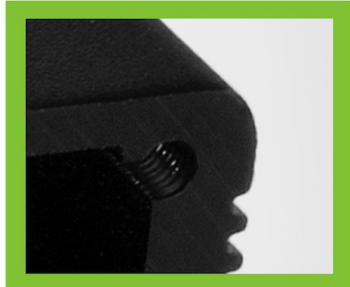

Delivery content:

- 1x BoXo corpus
- 2x front panels
- 8x countersunk head screws M3 PH2

Assembly instructions:

The front panels are placed on the case corpus with the countersink holes to the outside and fixed with 4 screws. This method enables any change of front panels on demand. Carefully tighten the screws in order that the M3 winding is not deformed and can be reused afterwards.

In principle you can assemble the D-type sockets on both sides of the front panels. For that reason we recommend using M3 screws in the length of 10mm to cover all possible assembly variations.

Also helpful may be the usage of MFD mounting frames from Neutrik® usable for assembly of all D-type sockets. This shortens the installation time significantly.